

# UTILIMASTER BODY PARTS QUICK REFERENCE GUIDE




*Parts & Service, Inc.*

563 Cortlandt Street – Belleville, NJ 07109

(800) 645-4344 – [www.fleetpartsonline.com](http://www.fleetpartsonline.com)


**UTILIMASTER**

**00010 – Steel Slat Spacer**

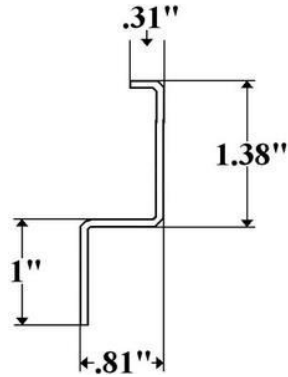

**107" Length**


**03020R & L – Vertical Connector**

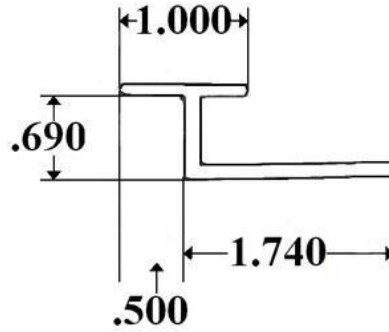

**108" Length, For aluminum body**


**Interchanges with: Utilimaster 06918987 (R) & 06918985 (L)**

**3003 – Bottom Rail (Thru 1/1998)**

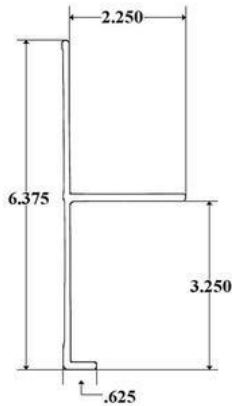


**\*\*\*Available in 15' & 28' lengths\*\*\***

**3004 – Bottom Rail (From 2/1998)**

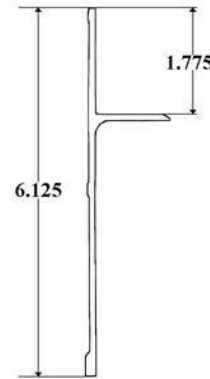

**\*\*\*Available in 16', 24', 28' & Per foot lengths\*\*\***


**3007 – Top Rail**

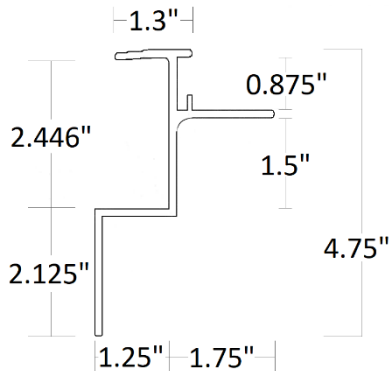

**\*\*\*Available in 16', 24', 26', 28' and Per foot lengths\*\*\***

**Interchanges with: Utilimaster 06001110 & 06000846**

**3009 – Rear Top Rail**

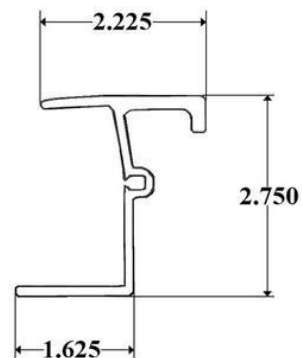


**For 96" & 102" wide bodies**

**Interchanges with: Utilimaster 06000845-09225**

UTILIMASTER


**3012 – Mitered Roof Radius**

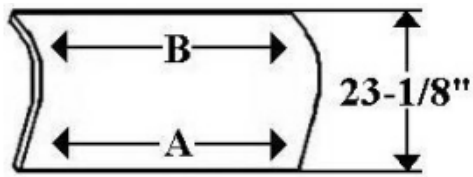

	A	B	
3012RY	80"	X 88-1/2	Ryder Yellow
3012M	84"	X 92-1/2	Mill
3012M2	90"	X 98-1/2	Mill

Interchanges with: Utilimaster 6701238 (RY),  
6701230 (92.5"), 6701232 (98.5")


**3050 – Starter Bow**

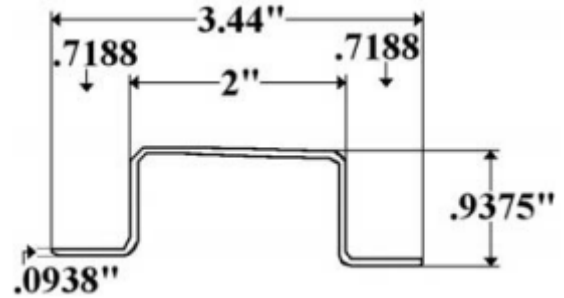

\*\*\*Available in 92.5" & 98.5" lengths\*\*\*

Interchanges with: Utilimaster 01760005 (92.5")  
& 01760008 (98.5")


**321-1D & 1E – Roof Bow**

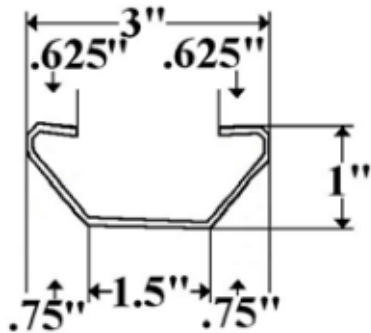

\*\*\*Available in 92.5" & 98.5" lengths\*\*\*

Interchanges with: Utilimaster 01760003 (92.5")


**330-2D – Steel Z-Post**

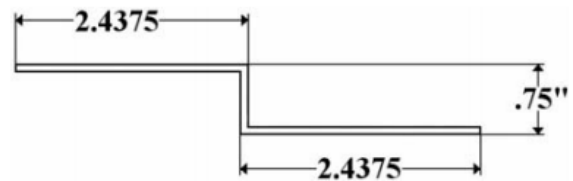

96" length, For Aluminum body (1998)

Interchanges with: Utilimaster 22813980

**4030 – Corner Post**

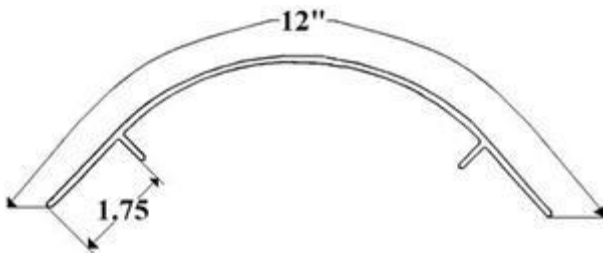


\*\*\*Available in 96" & 112" lengths\*\*\*

Interchanges with: Utilimaster 06013020 (96")  
& 06926136 (112")

UTILIMASTER

732-2D, 2E & NH – Steel Z-Post

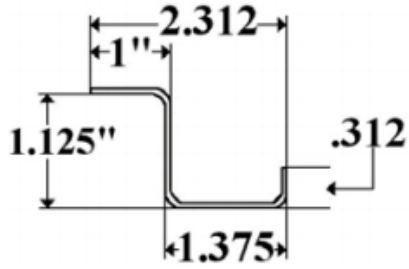


\*\*\*Available in 96" & 108" lengths\*\*\*

\*\*\*Available in 108" length w/ no holes\*\*\*

Interchanges with: Utilimaster 22150163 (96")  
& 22150165 (108")

CGS-OUTER – Rear Corner Outer Gusset

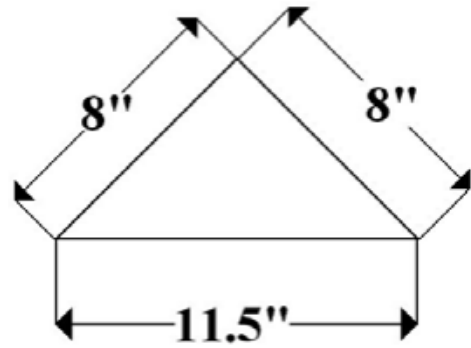

\*\*\*Inner Gusset also available\*\*\*

**UTILIMASTER**

**FP3000AF – Rear Cap**



Interchanges with: Utilimaster 06800029

**FP3000L – Left/Front Corner Cap**



Interchanges with: Utilimaster 6800025

**FP3000R – Right/Front Corner Cap**



Interchanges with: Utilimaster 6800026

**FP3100L – Left/Front Corner Cap**



Interchanges with: Utilimaster 6924889

**FP3100R – Right/Front Corner Cap**



Interchanges with: Utilimaster 6924888

UTILIMASTER

**FP3107L – Left/Rear Corner Cap**



\*\*\*Use with 3007 Top Rail\*\*\*

Interchanges with: Utilimaster 6800187


**FP3107R – Right/Rear Corner Cap**




\*\*\*Use with 3007 Top Rail\*\*\*

Interchanges with: Utilimaster 6800186

**GR2 – Rear Header**

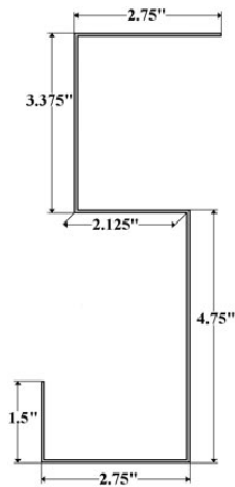


**UT1/102 – Rear Header**

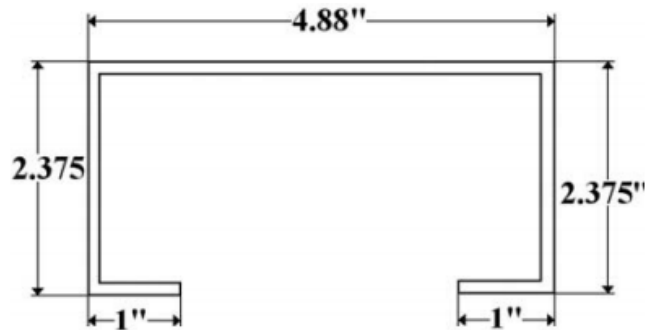

102" Length

Interchanges with: Utilimaster 22819374

**UT3 – Rear Corner Post**

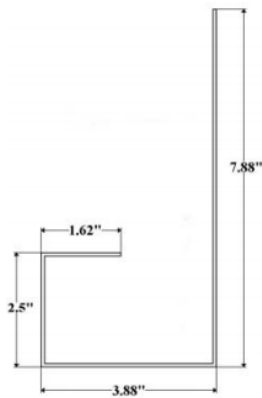

108" Length

Interchanges with: Utilimaster 22819046

**UTILIMASTER**

**Utilimaster 1900937 – Fiberglass Cap**



**For Utilimaster 96" wide body, Penske Yellow**

**Utilimaster 20510266 – Fiberglass Cap**



**For Utilimaster 96" wide body, Silver (Ryder/Budget)**

**Utilimaster 20510912 – Fiberglass Cap**



**For Utilimaster 102" wide body, Silver (Ryder/Budget)**